


Removal

- 1 Unscrew mounting bolt and remove striker with shims.

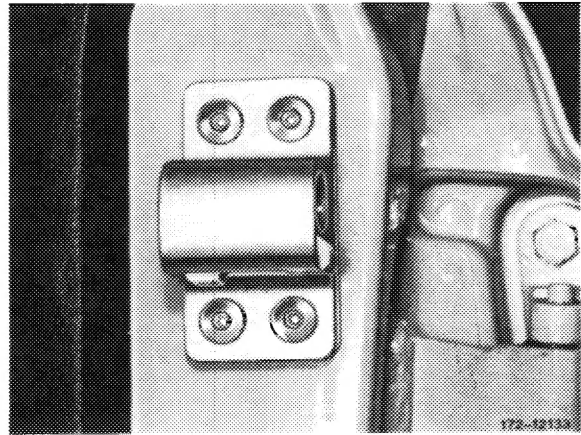

Installation

- 2 Install striker and tighten screws slightly.
- 3 Close doors so that striker can align with lock pin.

Note: If necessary, correct location of striker with shims. Shims are available in thicknesses of 0.5 and 1.5 mm.

- 4 Adjust closed door that door aligns with outside panel surface, or extends by maximum 1 mm.

- 5 Open door and tighten striker to 17 – 20 Nm (1.7 – 2 kpm).

Note: Lubricate new strikers with MB sliding paste.

Note


If the exterior rear view mirror has become offset on its own, the screw on the adjusting mechanism must be tightened accordingly.



Removal


Mirror glass

- 1 Pry glass out of ball socket with a plastic wedge and pull it out to one side.

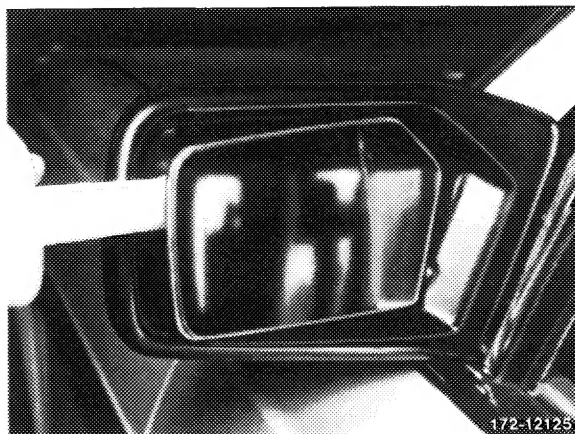


Entire mirror


- 2 Pry plastic lock off of grip with a small screwdriver.

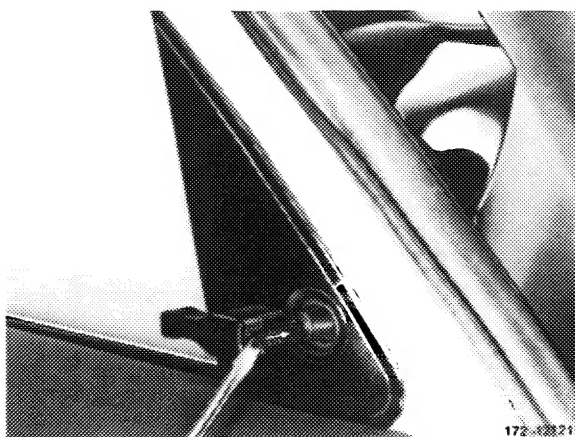

- 3 Pry cover off of door frame.

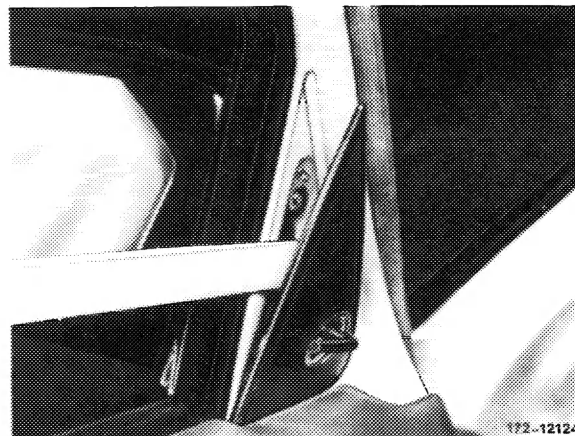

- 4 Unscrew screws and remove mirror.

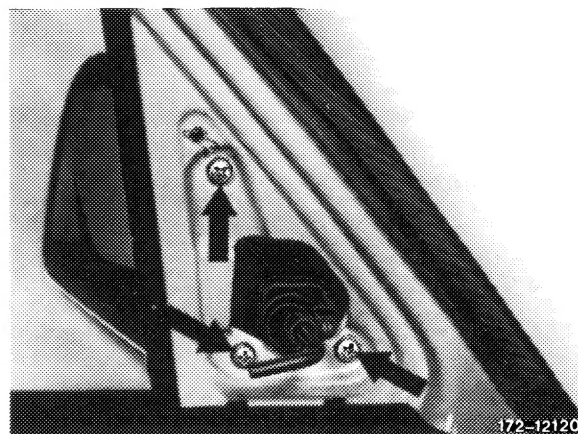


Installation


- 5 Install in reverse sequence.

Removal


- 1 Remove paneling on rear roof frame (68-447).

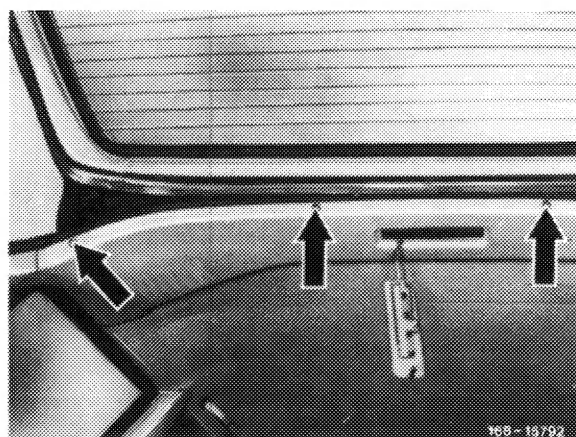

- 2 Loosen cable connections on roof frame and disconnect cable harness from holding clips on roof frame.

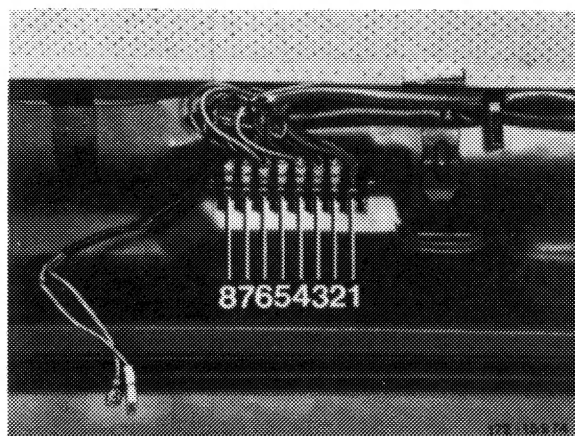


- 3 On vehicles with rear-mounted speakers, remove speakers including mounting bracket.

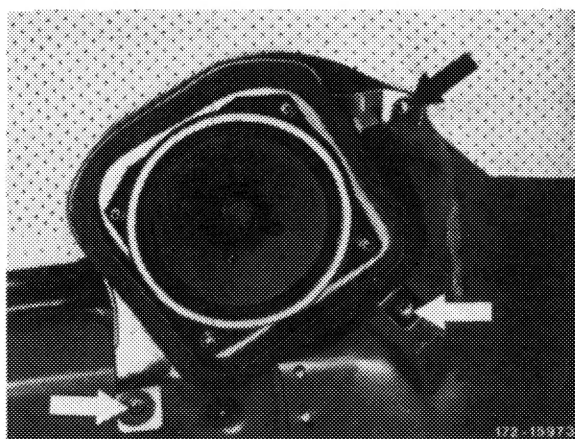


4 Disconnect water hose for back window washer (with central locking system also the vacuum lines).

5 Secure back door with a bar.

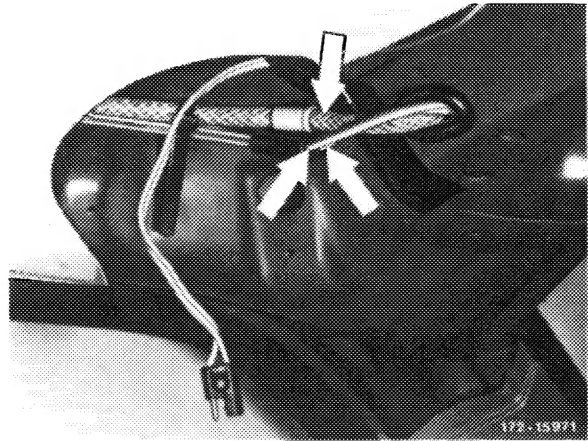


6 Pull out safety clips from rear attachment of gas pressure switch and push out bolts in outward direction.

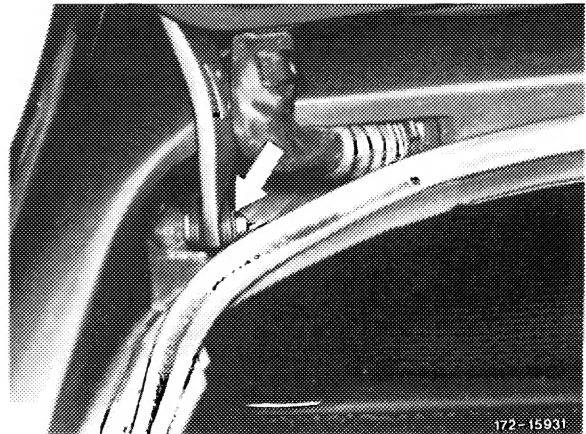

7 Mark installation position of hinge on back door.


8 Unscrew fastening screws and remove back door.

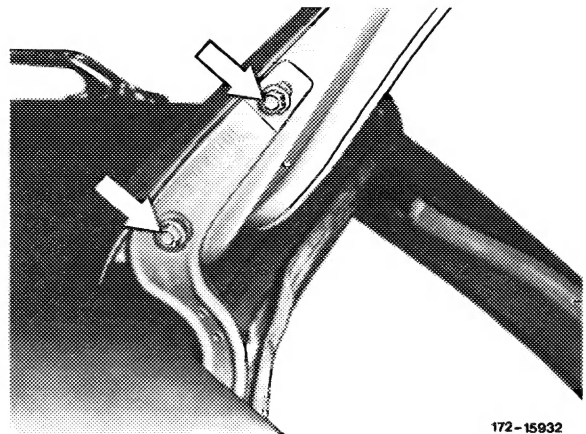


Installation

9 Attach back door to both hinges.


10 Secure back door with a bar.

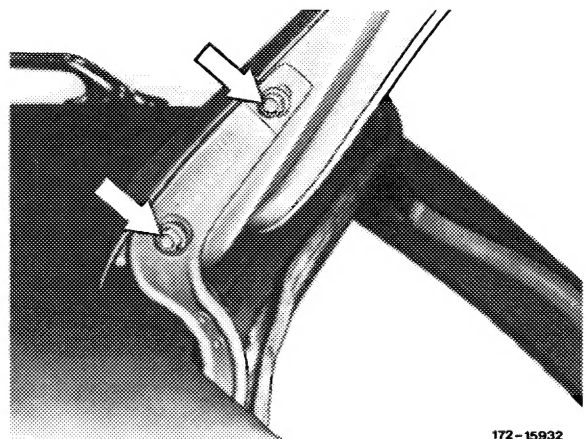

11 Attach gas pressure spring to hinge and secure.

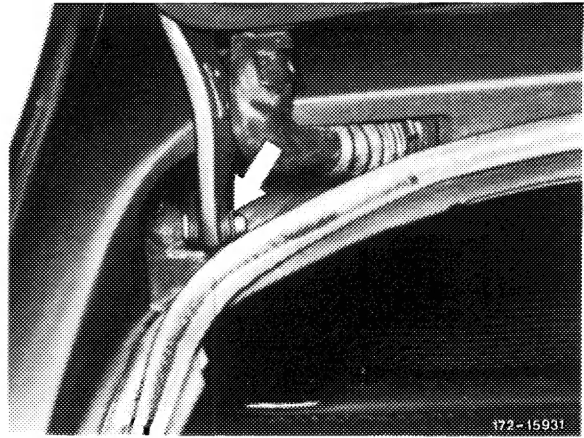


12 Connect water hose for back window washer (with central locking system also the vacuum lines).

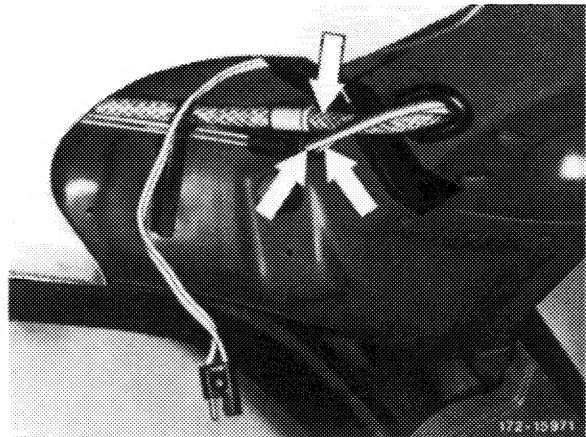

13 Connect electric lines from the left to the right (in driving direction).

- 1 light brown (ground)
- 2 black/purple
- 3 black/blue/purple
- 4 purple/white
- 5 black/purple/white
- 6 black
- 7 grey/purple
- 8 brown/grey

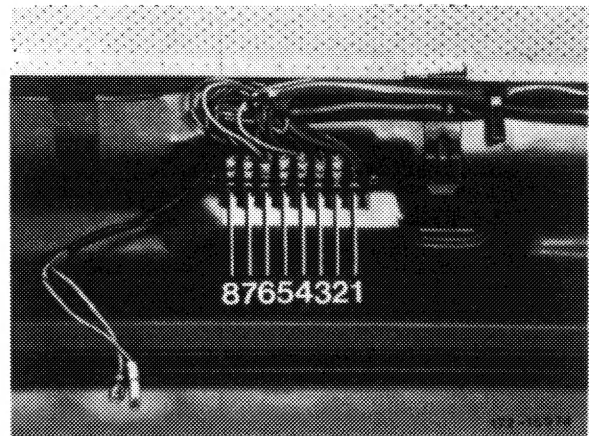

14 For further installation proceed vice versa.

15 Adjust back door (72-351).